OnePlus Buds 3

User Guide

Earbuds

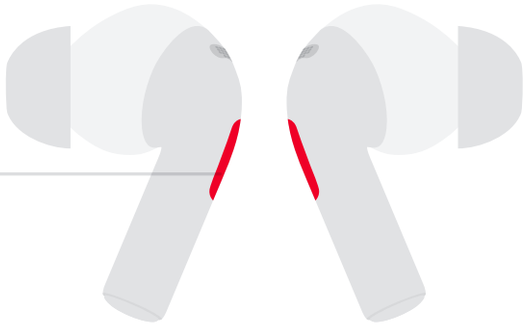

Touch Area

When wearing OnePlus Buds 3,
You can touch to perform related
operations.

Setup Button

Indicator Lamp

Charging Port

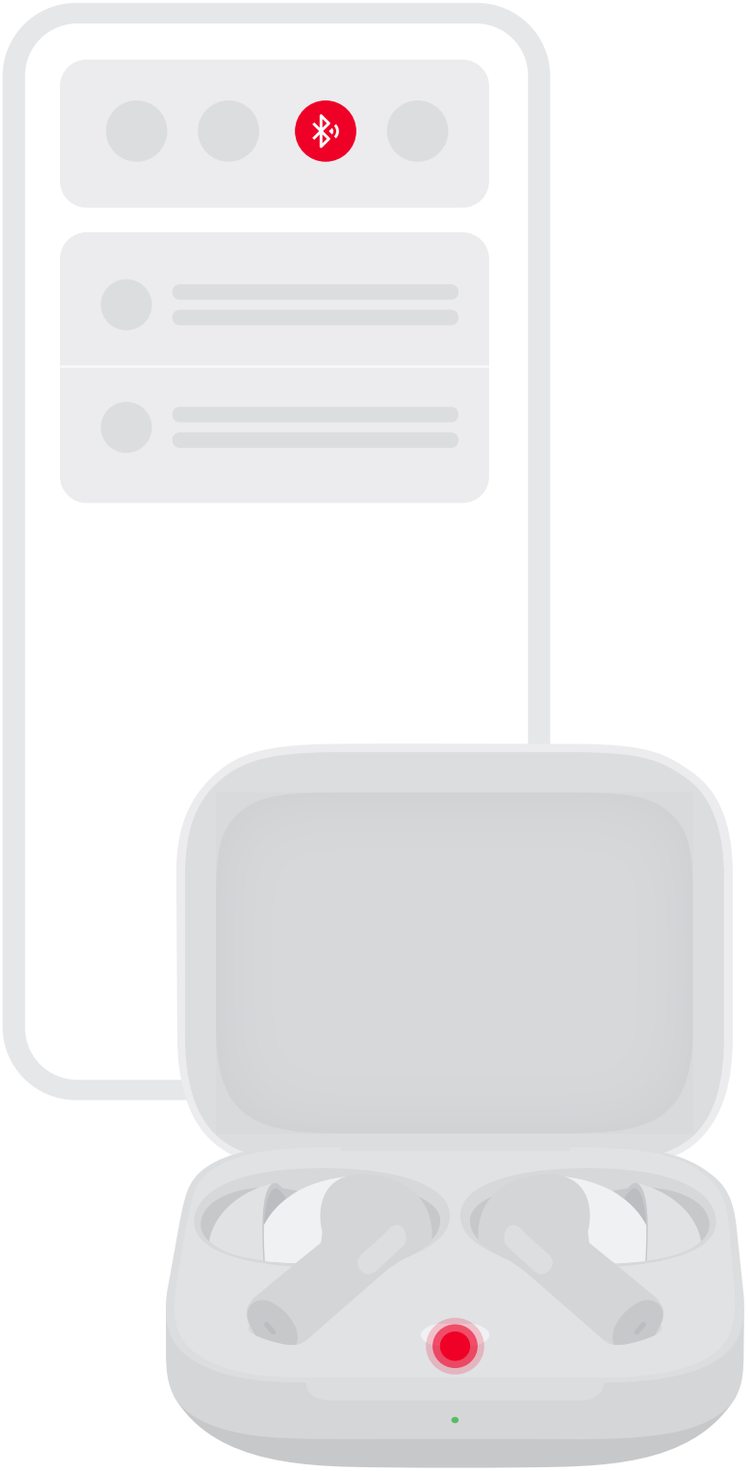

Pairing and Connecting

For OnePlus 6 (or later versions)
Enable Bluetooth on the OnePlus mobile phone, open the charging case of the buds, place the charging case close to the phone, and follow the prompts.

For other Android/iOS phones
Put your earbuds into the charging case with the cover opened. Press and hold the setup button of the charging case for 2s to enter Bluetooth settings. Then, select “OnePlus Buds 3”.

Restore factory settings
place the buds into the charging case with the cover opened. Press and hold the setup button of the charging case for 15s until the indicator blinks red.

Buds Details

For OnePlus 6 (or later versions)
You can set buds details and upgrade the software version of the earbuds under Settings > Bluetooth.

For other Android/iOS phones
Download and install HeyMelody to obtain features of the earbuds and upgrade the software version for enhanced listening experience.

※ Please download HeyMelody from Google Play Store or App Store.

HeyMelody

Replacing Ear Tips

Use ear tips in appropriate size to enjoy optimal comfort and noise cancellation experience. Check the earbuds accessories for ear tips in different sizes.
※ The medium size comes already attached.

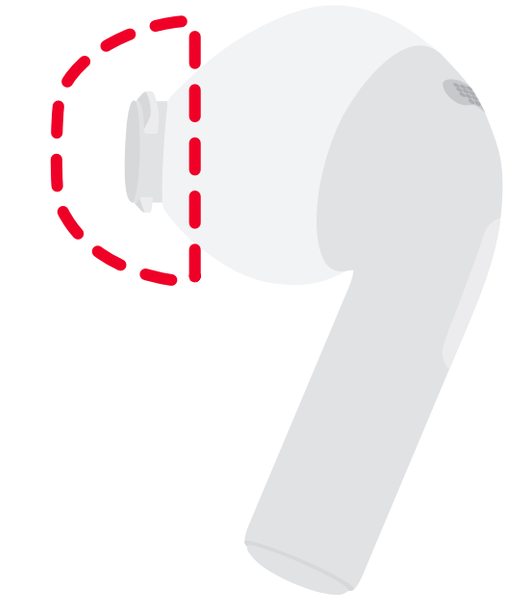

Volume Adjustment

Users can slide up and down on the touch area of the earbuds to control the volume of the earbuds.

Swipe up on the touch area:
turn up the volume
Slide down the touch area:
turn down the volume

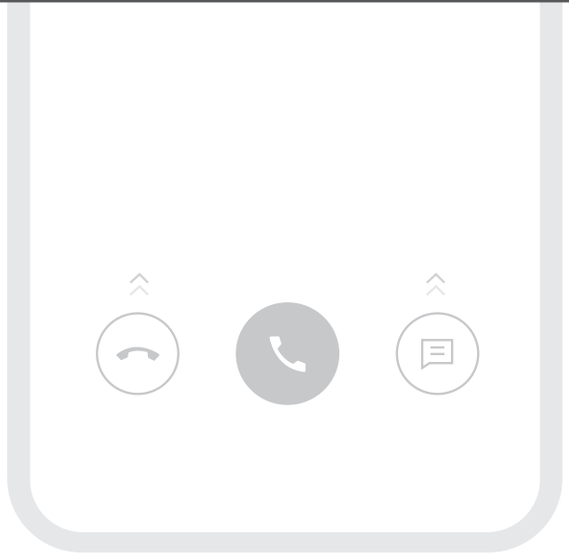

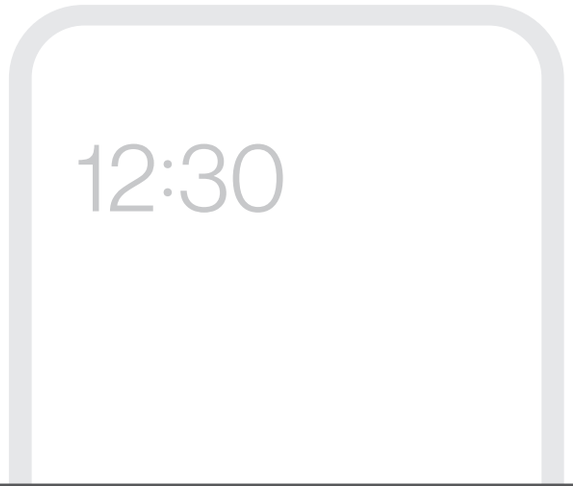

Play Control

You can customize the single-tap, double-tap, and triple-tap functions of the left earbud and right earbud on the phone to perform different commands:

- Single-Tap by default: “None”
- Double-tap by default: “Next”, “Answer/End calls”
- Triple-tap by default: “Previous”

Noise Control

1.5s

Press 1.5s:
Press and hold the pressing area for 1.5 second, and the noise control mode will be switched between “noise reduction” and “transparency” by default.

※ To switch between two different modes, enter Settings > Buds details.

Charging the Buds

Battery level
When earbuds are inside charging case, the indicator shows the battery level of the earbuds.
When earbuds are removed from charging case, the indicator shows the battery level of the charging case.
Green indicator: high battery level
Yellow indicator: medium battery level
Red indicator: low battery level

Earbuds
Place earbuds into the charging case, and they will be charged automatically.

Charging case
Use a Type-C cable to charge the charging case.

Never Settle

Version 1.0